

 





 
 


Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Power Tv		Shift + Power		9		9
	Vol+ Tv		Vol+		ShowView		Picture / Format
	CH+ Tv		Shift + CH+ /		Delete/*		Zoom / Size
	Select Drive		Smart / List		0		0
	AV Tv		Shift + AV / Input / RDS		Input Select		AV / Input / RDS
	Vol- Tv		Vol-		Prog/Check		TV/Radio /
	CH- Tv		Shift + CH- /		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2		<< Slow/Search		<< / Tune-
	3		3		Slow/Search >>		>> / Tune+
	CH/Page Up		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play/x1.3		Play / Slow
	6		6		i/Status		Info / Angle
	CH/Page Down		CH- / Page-		Guide		Guide / EPG / -/-
	7		7		Exit		Exit / Cancel / Clear





Originale	Sostituto
 Direct Navigator	 D.Menu / Top
 Left/<II	 Left
 Up	 Up
 OK	 OK
 Right/ II>	 Right
 Function Menu	 Menu / Home
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/Create Chapter	 Yellow / YouTube / Repeat
 Blue/Manual Skip	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 EXT Link	 Eject / Surround
 Direct Tv Rec	 Text / Goto

Originale	Sostituto
 Audio	 Audio / Lang I/II
 STTL	 Subtitle / EQ
 Display	 Display / Media
 Time Slip	 Sleep / Timer

