
 




 



































Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/Radio	 TV/Radio /
 0	 0
 EPG	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC
 Menu	 Menu / Home
 Info	 Info / Angle

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 SAT	 Shift + 0
 V-Mode	 Display / Media
 TV/AV	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up / PR+	 CH+ / Page+
 Up / PR+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK / List	 OK
 OK / List	 Smart / List
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Page-	 Shift + CH- / Page-
 Down / PR-	 CH- / Page-
 Down / PR-	 Down



