



Originale		Sostituto		Originale		Sostituto	
	Power		Power		<<		<< / Tune-
	Tv/ Radi o		TV/ Radi o /		>>		>> / Tune+
	Red		Red / Netfl ix / Search		Rec		Rec / Rec Mde
	Green		Green / APP / Repeat		St op		St op / Hol d
	Yel low		Yel low / YouT ube / Repeat		I <<		I << / Preset -
	Bl ue		Bl ue / Pri me Vi deo / Random		>> / I ndex		>> / Preset +
	P. Mde --		Fav / Mar ker / PC		Menu		Menu / Home
	Text		Text / Got o		Up		Up
	Hol d		Shi ft + St op /		Audi o		Audi o / Lang I / I I
	S. Mde --		Gui de / EPG / - / -		Lef t		Lef t
	Subt itle		Subt itle / EQ		OK		OK
	Si ze		Zoom / Si ze		Ri ght		Ri ght
	Aspect		Shi ft + Pi ctur e / For mat		Sl eep		Sl eep / Ti mer
	Subpage		Ej ect / Surr ound		Down		Down
	Medi a		Sm art / Li st		Exi t		Exi t / Cance l / Cle ar
	Pl ay / Pause		Pl ay / Sl ow		Vol +		Vol +
	Pl ay / Pause		Pause / Step / Freeze		Mut e		Mut e / Di mmer

























 
















Originale		Sostituto		Originale		Sostituto	
	Power		Power		<<		<< / Tune-
	Tv/ Radi o		TV/ Radi o /		>>		>> / Tune+
	Red		Red / Netfl ix / Search		Rec		Rec / Rec Mde
	Green		Green / APP / Repeat		St op		St op / Hol d
	Yel low		Yel low / You Tube / Repeat		I <<		I << / Preset -
	Bl ue		Bl ue / Pri me Vi deo / Random		>> / I ndex		>> / Preset +
	P. Mde		Pi ctur e / For mat		Menu		Menu / Home
	Text		Text / Got o		Up		Up
	Hol d		Shi ft + St op /		Audi o		Audi o / Lang I / I I
	S. Mde		Sound / Ti tle		Lef t		Lef t
	Subt itle		Subt itle / EQ		OK		OK
	Si ze		Zoom / Si ze		Ri ght		Ri ght
	Aspect		Shi ft + Pi ctur e / For mat		Sl eep		Sl eep / Ti mer
	Subpage		Ej ect / Sur roun d		Down		Down
	Medi a		Sm art / Li st		Exi t		Exi t / Cancel / Cl ear
	Pl ay		Pl ay / Sl ow		Vol +		Vol +
	Pause		Pause / Step / Freeze		Mut e		Mut e / Di mmer





Originale	Sostituto
 CH+	 CH+ / Page+
 Vol -	 Vol -
 Display	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 - / - -	 Shift + Guide / EPG / - / - -
 0	 0
 Recall	 Back / Return
 Source	 AV / Input / RDS

Originale	Sostituto
 FAV	 Fav / Marker / PC
 TVG	 Gui de / EPG / - / - -

