





















 






























Originale	Sostituto	Originale	Sostituto
Power	 Power	Right	 Right
Picture	 Picture / Format	Left	 Left
AV input	 AV / Input / RDS	OK	 OK
Input Tv	 TV/Radio /	Red	 Red / Netflix / Search
Menu	 Menu / Home	Green	 Green / APP / Repeat
Text	 Text / Goto	Yellow	 Yellow / YouTube / Repeat
STTL	 Subtitle / EQ	Blue	 Blue / Prime Video / Random
APPS	 Display / Media	Mute	 Mute / Dimmer
i	 Info / Angle	Vol+	 Vol+
X/Exit	 Exit / Cancel / Clear	Vol-	 Vol-
Home	 Shift + Menu /	CH+	 CH+ / Page+
Guide	 Guide / EPG / -/--	CH-	 CH- / Page-
Netflix	 Shift + Red / Netflix /	1	 1
Option	 Setup / OPT /	2	 2
Return/Back	 Back / Return	3	 3
Up	 Up	4	 4
Down	 Down	5	 5



Originale	Sostituto	Originale	Sostituto
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Last View	 Fav / Marker / PC		
?/eHelp	 Audio / Lang I/II		
My APP	 +  Shift + Green / APP /		
<<	 << / Tune-		
Play	 Play / Slow		
>>	 >> / Tune+		
I<<	 I<< / Preset-		
Pause	 Pause / Step / Freeze		
>>I	 >>I / Preset+		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		

