









 









 



 














 
 








 
 

 


 

















 





Originale	Sostituto
 Power	 Power
 Direct Tv Rec	 TV/Radio /
 Tv Aspect	 Zoom / Size
 Tv/Text	 Text / Goto
 1	 1
 2	 2
 Tracking/V-Lock+	 CH+ / Page+
 3	 3
 4	 4
 5	 5
 6	 6
 Tracking/V-Lock-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Volume+	 Vol+
 AV/Input Select	 AV / Input / RDS

Originale	Sostituto
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Volume-	 Vol-
 Search	 Red / Netflix / Search
 I<< Index	 I<< / Preset-
 Index >>I	 >>I / Preset+
 SV/V+	 Picture / Format
 Still Album	 Setup / OPT /
 Replay	 Display / Media
 Pause/Step	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Play	 Play / Slow
 Up	 Up
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Left	 Left



























 

 




 












 

 











Originale	Sostituto
	 OK
	 Right
	 >> / Tune+
	 Down
	 Stop / Hold
	 Shift + CH+ /
	 Shift + 2
	 Shift + 3
	 Shift + 7
	 Shift + CH- /
	 Shift + 5
	 Shift + 6
	 Guide / EPG / -/--
	 Back / Return
	 Shift + Exit / Cancel / Clear
	 Subtitle / EQ
	 Sleep / Timer

Originale	Sostituto
	 Shift + 4
	 Audio / Lang I/II
	 Info / Angle
	 Smart / List













Originale	Sostituto
 Power	 Power
 Direct Tv Rec	 TV/Radio /
 Tv Aspect	 Zoom / Size
 Tv/Text	 Text / Goto
 1	 1
 2	 2
 Tracking/V-Lock+	 CH+ / Page+
 3	 3
 4	 4
 5	 5
 6	 6
 Tracking/V-Lock-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Volume+	 Vol+
 AV/Input Select	 AV / Input / RDS

Originale	Sostituto
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Volume-	 Vol-
 Search	 Red / Netflix / Search
 I<< Index	 I<< / Preset-
 Index >>I	 >>I / Preset+
 SV/V+	 Picture / Format
 Still Album	 Setup / OPT /
 Replay	 Display / Media
 Pause/Step	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Play	 Play / Slow
 Exit	 Exit / Cancel / Clear
 Up	 Up
 <<	 << / Tune-
 Left	 Left





Originale	Sostituto
	 OK
	 Right
	 >> / Tune+
	 Down
	 Stop / Hold
	 Shift + CH+ /
	 Shift + 2
	 Shift + 3
	 Shift + 7
	 Shift + CH- /
	 Shift + 5
	 Shift + 6
	 Guide / EPG / -/--
	 Back / Return
	 Shift + Exit / Cancel / Clear
	 Subtitle / EQ
	 Sleep / Timer

Originale	Sostituto
	 Shift + 4
	 Audio / Lang I/II
	 Info / Angle
	 Smart / List





Originale	Sostituto
	Power
	TV/Radio /
	Picture / Format
	Text / Goto
	AV / Input / RDS
	Vol+
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8

Originale	Sostituto
	9
	Guide / EPG / -/-
	0
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

