
























 












Originale		Sostituto		Originale		Sostituto	
	Timer Review		Guide / EPG / /--		<< Speed		<< / Tune-
	Timer VCR		Fav / Marker / PC		> </Still		Pause / Step / Freeze
	Standby		Power		Speed >>		>> / Tune+
	Date+		Shift + Vol+		< Previous		I<< / Preset-
	Prog. +		Shift + CH+ /		> Next		>>I / Preset+
	Start+		Shift + >> /		Vol- Tv		Vol-
	End+		Shift + >>I / Preset+		Vol+ Tv		Vol+
	Date-		Shift + Vol-		Power Tv		Shift + Power
	Prog.-		Shift + CH- /		Prog- Tv		CH- / Page-
	Start-		Shift + << /		Prog+ Tv		CH+ / Page+
	End-		Shift + I<< / Preset-		Select		OK
	Record/OTR		Rec / Rec Mode		Decoder		Smart / List
	OK		Shift + OK		Tuner		Shift + 6
	Clear		Exit / Cancel / Clear		Up		Up
	Tracking		Back / Return		SP/LP		Picture / Format
	Stop		Stop / Hold		Nicam		Shift + Audio / Lang I/II
	Play		Play / Slow		Monitor		Display / Media





	Originale	Sostituto	Originale	Sostituto
	 Down	 Down		
	 Rec Mode	 +  Shift + Rec / Rec Mode		
	 Audio	 Audio / Lang I/II		
	 Set Clock	 Menu / Home		
	 Cassette	 Yellow / YouTube / Repeat		
	 1	 1		
	 2	 2		
	 3	 3		
	 Show View	 Info / Angle		
	 4	 4		
	 5	 5		
	 6	 6		
	 D/W	 Red / Netflix / Search		
	 7	 7		
	 8	 8		
	 9	 9		
	 0	 0		

