

 

 















 







 









 















 



 

 



 

 





Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 Program	 TV/Radio /
 Open/close	 Eject / Surround	 Mute	 Mute / Dimmer
 1	 1	 N/P	 AV / Input / RDS
 2	 2	 Time	 Sleep / Timer
 3	 3	 OSD	 Display / Media
 Subtitle	 Subtitle / EQ	 Setup	 Setup / OPT /
 4	 4	 Up	 Up
 5	 5	 Title	 Sound / Title
 6	 6	 Left	 Left
 Angle	 Shift + Info / Angle	 Enter	 OK
 7	 7	 Right	 Right
 8	 8	 Menu	 Menu / Home
 9	 9	 Down	 Down
 Language	 Audio / Lang I/II	 Return	 Back / Return
 0	 0	 USB/Card	 Smart / List
 +10	 Guide / EPG / -/-	 Stop	 Stop / Hold
 Video	 Shift + 4	 Play	 Play / Slow





Originale		Sostituto		Originale		Sostituto	
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	1<<		1<< / Preset-				
	>>1		>>1 / Preset+				
	A-B		Yellow / YouTube / Repeat				
	Repeat		Green / APP / Repeat				
	L/R		Red / Netflix / Search				
	Slow	+	Shift + Play /				
	Vol+		Vol+				
	Echo+		CH+ / Page+				
	Mic Vol+	+	Shift + CH+ /				
	Mic		Info / Angle				
	Vol-		Vol-				
	Echo-		CH- / Page-				
	Mic Vol-	+	Shift + CH- /				
	Zoom		Zoom / Size				

