



Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Red		Red / Netflix / Search
	6		6		EPG		Guide / EPG / -/-
	7		7		Green		Green / APP / Repeat
	8		8		Audio		Audio / Lang I/II
	9		9		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Subtitle		Subtitle / EQ
	0		0		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		TTX		Text / Goto
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Left		Left		Tv/Radio		TV/Radio /



Program



Originale	Sostituto
Roll	Smart / List
Prog	Shift + TV/Radio / Program
Digest	Display / Media
Device	Picture / Format
Rec	Rec / Rec Mode
Zoom	Zoom / Size
Stop	Stop / Hold
Prev	I<< / Preset-
Next	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+

Originale	Sostituto

