 

 

 

 

 


 

 

 

 



 
 
 

 

 

 

 





Originale	Sostituto
 Power	 Power
 Timer	 Sleep / Timer
 Sub TV	 TV/Radio /
 Preview	 Smart / List
 Snap	 Display / Media
 Shut Down	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ↑	 Guide / EPG / -/-












 

 

 

Originale	Sostituto
 ←	 Left
 Mute	 Mute / Dimmer
 Stereo	 Audio / Lang I/II
 Source	 AV / Input / RDS
 Zoom	 Zoom / Size
 Min	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Shift + Left
 Right	 Right
 Enter	 OK
 Timeshift	 Picture / Format
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Play	 Play / Slow





Originale

Sostituto

	Pause		Pause / Step / Freeze
	Stop	 + 	Shift + Stop /
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Fun1		Red / Netflix / Search
	Fun2		Green / APP / Repeat
	Fun3		Yellow / YouTube / Repeat
	Fun4		Blue / Prime Video / Random

Originale

Sostituto

