





Originale		Sostituto		Originale		Sostituto	
	Power		Power		5		5
	-/-- TV		Guide / EPG / -/--		5 TV		Shift + 5
	TV		TV/Radio /		6		6
	DVD		Smart / List		6 TV		Shift + 6
	Open/Close		Eject / Surround		7		7
	Mute		Mute / Dimmer		7 TV		Shift + 7
	Display		Display / Media		8		8
	PP		Back / Return		8 TV		Shift + 8
	TV/AV		AV / Input / RDS		9 TV		Shift + 9
	1		1		9		9
	1 TV		Shift + 1		0 TV		Shift + 0
	2		2		0		0
	2 TV		Shift + 2		-/--		Shift + Guide / EPG / -/--
	3		3		+10		Fav / Marker / PC
	3 TV		Shift + 3		Audio		Audio / Lang I/II
	4		4		Setup		Setup / OPT /
	4 TV		Shift + 4		Menu DVD		Menu / Home







Originale	Sostituto
 Menu Tv	 D.Menu / Top
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Stop	 Stop / Hold

Originale	Sostituto
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 Shift + TV/Radio / Program
 Slow	 Shift + Play /
 Search	 Red / Netflix / Search
 Zoom	 Zoom / Size
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 PAL/NTSC	 Picture / Format
 ?	 Shift + Info / Angle
 ◆	 Shift + Setup / OPT / Tools
 +	 Shift + Zoom /
 [><]	 Shift + Subtitle / EQ
 Timer	 Sleep / Timer
 X	 Shift + Exit / Cancel / Clear
 [/≡]	 Shift + Text / Goto





Originale	Sostituto	Originale	Sostituto
	[≡]		Text / Goto

