
































































































Originale	Sostituto
 Power	 Power
 -/-- TV	 Guide / EPG / -/--
 TV	 TV/Radio /
 DVD	 Smart / List
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 Display	 Display / Media
 PP	 Back / Return
 TV/AV	 AV / Input / RDS
 1	 1
 1 TV	 Shift + 1
 2	 2
 2 TV	 Shift + 2
 3	 3
 3 TV	 Shift + 3
 4	 4
 4 TV	 Shift + 4

Originale	Sostituto
 5	 5
 5 TV	 Shift + 5
 6	 6
 6 TV	 Shift + 6
 7	 7
 7 TV	 Shift + 7
 8	 8
 8 TV	 Shift + 8
 9 TV	 Shift + 9
 9	 9
 0 TV	 Shift + 0
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 +10	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Setup	 Setup / OPT /
 Menu DVD	 Menu / Home





Originale	Sostituto
 Menu Tv	 D.Menu / Top
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Stop	 Stop / Hold

Originale	Sostituto
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 Shift + TV/Radio / Program
 Slow	 Shift + Play /
 Search	 Red / Netflix / Search
 Zoom	 Zoom / Size
 Clear	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 PAL/NTSC	 Picture / Format
 ?	 Shift + Info / Angle
 ◆	 Shift + Setup / OPT / Tools
 +	 Shift + Zoom /
 [><]	 Shift + Subtitle / EQ
 Timer	 Sleep / Timer
 X	 Shift + Exit / Cancel / Clear
 [/≡]	 Shift + Text / Goto





Originale



[≡]

Sostituto



Text / Goto

Originale

Sostituto

