




 









 
 


















Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Mute	 Mute / Dimmer
 PR List	 Smart / List
 Fav	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Info	 Info / Angle
 EPG	 Red / Netflix / Search
 Subtitle	 Subtitle / EQ
 Teletext	 Text / Goto
 Guide	 Shift + Guide / EPG / --
 Music	 Sound / Title
 S.Show	 Display / Media
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 <<	 << / Tune-

Originale	Sostituto
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Up	 Up
 Stop / Exit	 Exit / Cancel / Clear
 Stop / Exit	 Stop / Hold
 Left	 Left
 Enter	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.Adj	 Picture / Format
 Menu	 Menu / Home



