



 







 



 





















 

 



 






 



 
















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH-	 CH- / Page-
 1	 1	 Home	 Menu / Home
 2	 2	 Voice	 Display / Media
 3	 3	 Sources	 AV / Input / RDS
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 Wheel Up	 >>  / Preset+
 7	 7	 Right	 Right
 8	 8	 Wheel Down	 I<< / Preset-
 9	 9	 OK	 OK
 Guide/List	 Guide / EPG / -/--	 Down	 Down
 0/Quick Access	 0	 Back	 Back / Return
 .../AD/SAP	 Fav / Marker / PC	 *	 D.Menu / Top
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 CH+	 CH+ / Page+	 Green	 Green / APP / Repeat
 Mute	 Mute / Dimmer	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random

Originale	Sostituto	Originale	Sostituto
 CH-	 CH- / Page-	 TV	 DVD
 Home	 Menu / Home	 SAT	 AUX
 Voice	 Display / Media	 SLOW	 STEP-FREEZE
 Sources	 AV / Input / RDS	 HOLD	 REC MODE
 Up	 Up	 TUNE-	 TUNE+
 Left	 Left	 PRESET-	 PRESET+
 Wheel Up	 >>  / Preset+	 TITLE	 LANG
 Right	 Right	 EQ	 SURROUND
 Wheel Down	 I<< / Preset-	 SOUND	 AUDIO
 OK	 OK	 SUBTITLE	 TIMER
 Down	 Down	 PICTURE	 ZOOM
 Back	 Back / Return	 TOP MENU	 OPT-TOOLS
 *	 D.Menu / Top	 GOTO	 RDS
 Red	 Red / Netflix / Search	 D.MENU	 SETUP
 Green	 Green / APP / Repeat	 TEXT	 AV INPUT
 Yellow	 Yellow / YouTube / Repeat	 HOME	 ANGLE
 Blue	 Blue / Prime Video / Random	 MENU	 INFO





Originale	Sostituto
Netflix	+  Shift + Red / Netflix /
prime video	+  Shift + Blue / Prime
Disney+	TV/Radio /
Rakuten TV	Picture / Format
Smart Colors	Smart / List
Alexa	Zoom / Size

Originale	Sostituto

