






Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Sleep	Sleep / Timer
0	0
Info	Info / Angle
PLUGIH	Setup / OPT /
EPG	Guide / EPG / -/--
Fav	Fav / Marker / PC

Originale	Sostituto
<	I<< / Preset-
Up	Up
>	>>I / Preset+
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
Back	Back / Return
CH+	CH+ / Page+
Vol-	Vol-
TV	AV / Input / RDS
CH-	CH- / Page-
Radio	TV/Radio /
Radio	Shift + 6





Originale	Sostituto
 Rec	 Rec / Rec Mode
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 FWD	 >> / Tune+
 REV	 << / Tune-
 TV	 Shift + 1
 Audio	 Audio / Lang I/II
 Help	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random
 Text	 Text / Goto
 Timer	 Shift + Sleep / Timer
 PIP	 Picture / Format
 Media	 Display / Media

Originale	Sostituto

