



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title





Originale		Sostituto		Originale		Sostituto	
	Display		Display / Media		Yellow		Yellow / YouTube / Repeat
	Fav		Fav / Marker / PC		Blue		Blue / Prime Video / Random
	TXT		Text / Goto				
	Sub / Index		Subtitle / EQ				
	EPG / S.Page		Guide / EPG / -/-				
	Size		Zoom / Size				
	Stop		Stop / Hold				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Hold / Aspect		Setup / OPT /				
	Hold / Aspect		Shift + Stop /				
	Play / Pause		Play / Slow				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Reveal / Antenna		TV/Radio /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				

