



 



 



 



 











 

 





 



 

 
 




 



 

 

 


 


 

 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol+		Vol+
	Energy Saving		Eject / Surround		FAV/Mark		Fav / Marker / PC
	AV Mode		Picture / Format		P+		CH+ / Page+
	Input		AV / Input / RDS		Vol-		Vol-
	Tv/Rad		TV/Radio /		Ratio		Display / Media
	1		1		P-		CH- / Page-
	2		2		Mute		Mute / Dimmer
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Q.Menu		D.Menu / Top
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	List		Smart / List		Down		Down
	0		0		Back		Back / Return
	Q.View		Setup / OPT /		Info		Info / Angle



