























































 

 




 








Originale	Sostituto
 Power	 Power
 Auto Off	 Shift + Power
 Sleep	 Sleep / Timer
 Muting	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Disc	 Display / Media
 4	 4
 5	 5
 6	 6
 +10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Program	 TV/Radio /

Originale	Sostituto
 Cancel	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 AUX	 Shift + 7
 EQ	 Subtitle / EQ
 3D AI	 Smart / List
 <<	 << / Tune-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 >>	 >> / Tune+
 V.Bass	 Sound / Title
 </▼	 Left
 </▼	 Down
 </▼	 CH- / Page-



Program



Originale	Sostituto
 Stop	 Stop / Hold
 Play/Pause/▲	 Play / Slow
 Play/Pause/▲	 Right
 Play/Pause/▲	 Pause / Step / Freeze
 Play/Pause/▲	 Up
 Play/Pause/▲	 CH+ / Page+
 Volume-	 Vol-
 Volume+	 Vol+

Originale	Sostituto

