





Originale	Sostituto
1	1
1 CD	SHIFT + TV 1 Shift + 1
2	2
2 CD	SHIFT + DVD 2 Shift + 2
3	3
3 CD	SHIFT + CD - STB 3 Shift + 3
TUNER	NETFLIX SEARCH Red / Netflix / Search
4	4
4 CD	SHIFT + VIDEO 4 Shift + 4
5	5
5 CD	SHIFT + TAPE 5 Shift + 5
6	6
6 CD	SHIFT + TUNER 6 Shift + 6
PHONO	APP REPEAT Green / APP / Repeat
7	7
7 CD	SHIFT + AUX - HDD 7 Shift + 7
8	8

Originale	Sostituto
8 CD	SHIFT + USB 8 Shift + 8
9	9
9 CD	SHIFT + BLUETOOTH 9 Shift + 9
Tape	YouTube REPEAT A-B Yellow / YouTube / Repeat
10	0
10 CD	SHIFT + HDMI - BAT 0 Shift + 0
+10	GUIDE EPG Guide / EPG / -/-
+10 CD	SHIFT + GUIDE EPG Shift + Guide / EPG / -/-
Play CD	SLOW Play / Slow
Stop CD	HOLD Stop / Hold
Pause CD	STEP - FREEZE Pause / Step / Freeze
I<< CD	PRESET- I<< / Preset-
>>I CD	PRESET+ >>I / Preset+
<< CD	TUNE- << / Tune-
>> CD	TUNE+ >> / Tune+
Fade Muting	DIMMER MUTE Mute / Dimmer
Volume-	VOL Vol-





Originale		Sostituto		Originale		Sostituto	
	Volume+		Vol+				

