













| Originale | Sostituto |
|---|---|
|  |  Mute / Dimmer |
|  |  Power |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Guide / EPG / -/- |
|  |  Info / Angle |
|  |  0 |
|  |  Smart / List |
|  |  CH+ / Page+ |
|  |  Up |

| Originale | Sostituto |
|---|---|
|  |  Left |
|  |  Vol- |
|  |  OK |
|  |  Vol+ |
|  |  Right |
|  |  Down |
|  |  CH- / Page- |
|  |  Exit / Cancel / Clear |
|  |  Menu / Home |
|  |  Rec / Rec Mode |
|  |  Back / Return |
|  |  Red / Netflix / Search |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  Green / APP / Repeat |
|  |  >> / Tune+ |
|  |  Blue / Prime Video / Random |



