



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Right		Right
	Display		Display / Media		Down		Down
	Setup		Setup / OPT /		1		1
	Mute		Mute / Dimmer		2		2
	Menu		Menu / Home		3		3
	Music		Red / Netflix / Search		4		4
	Copy		Info / Angle		5		5
	Zoom		Zoom / Size		6		6
	Tv System		TV/Radio /		7		7
	Browser		D.Menu / Top		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		Time Shift		Sound / Title
	Guide		Guide / EPG / -/-		0		0
	Return		Back / Return		Goto		Text / Goto
	Up		Up		Rec		Rec / Rec Mode
	Left		Left		Play		Play / Slow
	OK		OK		Stop		Stop / Hold





Originale	Sostituto		
TIMER	Timer	TIMER SLEEP	Sleep / Timer
PAUSE/STEP	Pause/Step	STEP - FREEZE	Pause / Step / Freeze
SLOW	l>/Slow	PC FAV MARKER	Fav / Marker / PC
PREV	l<</Prev	PRESET-	l<< / Preset-
RECLIST	ReclList	LIST SMART	Smart / List
INS REPLAY	←/INS Replay	CH PAGE	CH- / Page-
CM SKIP	→/CM Skip	CH PAGE	CH+ / Page+
NEXT	>>I/Next	PRESET+	>>I / Preset+
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
FR	<</FR	TUNE-	<< / Tune-
F1	F1	Prime Video RANDOM	Blue / Prime Video / Random
SOURCE	Source	RDS AV INPUT	AV / Input / RDS
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
FF	>>/FF	TUNE+	>> / Tune+

Originale	Sostituto

