











Originale	Sostituto
Power	Power
Power TV	Shift + Power
Vol + TV	Vol+
CH + TV	Shift + CH+ /
Select Drive	Smart / List
AV TV	Shift + AV / Input / RDS
CH - TV	Shift + CH- /
Vol - TV	Vol-
1	1
2	2
3	3
CH / Page +	CH+ / Page+
4	4
5	5
6	6
CH / Page -	CH- / Page-
7	7

Originale	Sostituto
8	8
9	9
ShowView	Picture / Format
*	Fav / Marker / PC
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
<< Slow / Search	<< / Tune-
Slow / Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play / x1.3	Play / Slow
i	Info / Angle
Prog / Check	TV/Radio /
Guide	Guide / EPG / -/-





Originale	Sostituto
 Direct Navigator	 D.Menu / Top
 <II / Left	 Left
 Up	 Up
 Enter	 OK
 Right / II>	 Right
 Functions	 Setup / OPT /
 S / Sub Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Create Chapter	 Yellow / YouTube / Repeat
 Blue / Manual	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Ext Link	 Text / Goto
 Direct Tv Rec	 Eject / Surround

Originale	Sostituto
 Audio	 Audio / Lang I/II
 Status	 Zoom / Size
 Display	 Display / Media
 Time Slip	 Sleep / Timer

