



Originale	Sostituto
Power	Power
Game	Smart / List
Sleep	Sleep / Timer
1	1
2	2
3	3
Display	Display / Media
4	4
5	5
6	6
7	7
8	8
9	9
Channel Return	Back / Return
0	0
+100	Guide / EPG / -/--
Vol-	Vol-

Originale	Sostituto
Vol-	Left
CH+	CH+ / Page+
CH+	Up
Vol+	Vol+
Vol+	Right
CH-	CH- / Page-
CH-	Down
Mute	Mute / Dimmer
Menu	Menu / Home

