



Originale	Sostituto
Standby	Power
Tv Operate	Shift + Power
CH+ Tv	Shift + CH+ /
Vol+ Tv	Vol+
Timer On/Off	Sleep / Timer
Input Select Tv	Shift + AV / Input / RDS
CH- Tv	Shift + CH- /
Vol- Tv	Vol-
Menu	Menu / Home
Up	Up
Set	Setup / OPT /
SV/V+/Timer	Picture / Format
Left	Left
Right	Right
Down	Down
Clear	Exit / Cancel / Clear
<</REW	<< / Tune-

Originale	Sostituto
Play/X2	Play / Slow
>>/FF	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause/Still	Pause / Step / Freeze
Tape Speed	Zoom / Size
Audio Out	Audio / Lang I/II
1	1
2	2
3	3
Mode OSD	Text / Goto
4	4
5	5
6	6
Display	Display / Media
7	7
8	8





Originale	Sostituto
 9	 9
 Channel+	 CH+ / Page+
 -/--/AM/PM	 Guide / EPG / -/--
 0	 0
 Input Select	 AV / Input / RDS
 Channel-	 CH- / Page-
 TV/VCR	 TV/Radio /
 Skip Search	 Smart / List
 Zero Back	 Back / Return
 I>/Slow	 Yellow / YouTube / Repeat
 DPSS-	 I<< / Preset-
 DPSS+	 >>I / Preset+
 Lock	 Blue / Prime Video / Random

Originale	Sostituto

