





 


 
 

 





 




 


 









 









 
 
 

 




 

 







 






 
 
 
Originale	Sostituto
 Standby	 Power
 1	 1
 2	 2
 3	 3
 DVD	 Shift + 2
 4	 4
 5	 5
 6	 6
 TUNER	 Shift + 6
 7	 7
 8	 8
 9	 9
 Aux	 Shift + 7
 Up	 Up
 0	 0
 Left	 Left
 Ent	 OK

Originale	Sostituto
 Right	 Right
 A-B	 Yellow / YouTube / Repeat
 Down	 Down
 Sleep	 Sleep / Timer
 << / Preset-	 << / Tune-
 << / Preset-	 Shift + I<< / Preset-
 >> / Preset+	 >> / Tune+
 >> / Preset+	 Shift + >>I / Preset+
 Menu / PBC	 Menu / Home
 Open / Close	 Eject / Surround
 Slow / Memory	 Shift + Play /
 Slow / Memory	 Fav / Marker / PC
 Slow / Memory	 Shift + Up
 I<< / Tuning+	 I<< / Preset-
 I<< / Tuning+	 Shift + >> /
 I<< / Tuning+	 Shift + Left
 Stop	 Stop / Hold





Originale	Sostituto
	Stop Shift + OK
	>>I / Tuning- Preset+ >>I / Preset+
	>>I / Tuning- SHIFT + TUNE- Shift + << /
	>>I / Tuning- SHIFT + Right Shift + Right
	Play / Pause SLOW Play / Slow
	Play / Pause STEP - FROZE Pause / Step / Freeze
	Play / Pause SHIFT + Down Shift + Down
	Title TITLE SOUND Sound / Title
	Setup OPT-TOOLS SETUP Setup / OPT /
	Language SHIFT + LANG I/II Shift + Audio / Lang I/II
	Subtitle EQ SUBTITLE Subtitle / EQ
	Zoom SIZE ZOOM Zoom / Size
	Adj/Vol+ + VOL Vol+
	Audio LANG I/II AUDIO Audio / Lang I/II
	EQ SHIFT + EQ SUBTITLE Shift + Subtitle / EQ
	Adj/Vol- VOL- Vol-
	Goto GOTO TEXT Text / Goto

Originale	Sostituto
	Return RETURN Back / Return
	Display MEDIA DISPLAY Display / Media
	Mute DIMMER MUTE Mute / Dimmer

