 



 

















































 




































 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		DRC		Picture / Format
	Function		Smart / List		TUNER		TV/Radio /
	1 / CD		1		TUNER		Shift + 6
	1 / CD		Shift + 3		Mo. / St.		Sound / Title
	2 / VCR		2		Input Mode		AV / Input / RDS
	2 / VCR		Shift + 4		Volume+		Vol+
	3 / DVD		3		Volume-		Vol-
	3 / DVD		Shift + 2		Mute		Mute / Dimmer
	4		4		Menu		Menu / Home
	5 / SAT		5		Tuning Mode		Guide / EPG / -/-
	5 / SAT		Shift + 0		Up		Up
	6		6		Left		Left
	7		7		Enter		OK
	8		8		Right		Right
	9		9		Down		Down
	Sleep		Sleep / Timer		Info		Info / Angle
	0		0		Sub Woofer		Eject / Surround





Originale	Sostituto
 Tuner Memory	 Fav / Marker / PC
 Stereo	 Audio / Lang I/II
 SFE Mode	 Green / APP / Repeat
 PL II Mode	 Yellow / YouTube / Repeat
 PL II Effect	 Blue / Prime Video / Random
 SPK. Level	 Subtitle / EQ
 Test Tone	 Text / Goto
 RDS Display	 Shift + Display / Media
 PTY+	 Shift + Up
 PTY Search	 Shift + OK
 PTY-	 Shift + Down
 TA	 Shift + Right

Originale	Sostituto

