











Originale	Sostituto	Originale	Sostituto
 TV/R	TV/R	 TV/RADIO	TV/Radio /
 On/Off	Power	 Power	Power
 1	1	 TV 1	1
 2	2	 DVD 2	2
 3	3	 CD - STB 3	3
 4	4	 VIDEO 4	4
 5	5	 TAPE 5	5
 6	6	 TUNER 6	6
 7	7	 AUX - HDD 7	7
 8	8	 USB 8	8
 9	9	 BLUETOOTH 9	9
 Menu	Menu / Home	 HOME MENU	Menu / Home
 0	0	 HDMI - SAT 0	0
 Text	Text / Goto	 GOTO TEXT	Text / Goto
 Vol-	Vol-	 VOL -	Vol-
 P+	CH+ / Page+	 CH PAGE	CH+ / Page+
 Vol+	Vol+	 VOL +	Vol+

Originale	Sostituto	Originale	Sostituto
 Mute	Mute / Dimmer	 DIMMER MUTE	Mute / Dimmer
 P-	CH- / Page-	 CH PAGE	CH- / Page-
 i	Info / Angle	 ANGLE INFO	Info / Angle
 Red	Red / Netflix / Search	 NETFLIX SEARCH	Red / Netflix / Search
 Green	Green / APP / Repeat	 APP REPEAT	Green / APP / Repeat
 Yellow	Yellow / YouTube / Repeat	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 Blue	Blue / Prime Video / Random	 Prime Video RANDOM	Blue / Prime Video / Random
 EPG	Guide / EPG / -/-	 GUIDE EPG	Guide / EPG / -/-
 Up	Up	 Up	Up
 Media	Display / Media	 MEDIA DISPLAY	Display / Media
 Left	Left	 Left	Left
 OK	OK	 OK	OK
 Right	Right	 Right	Right
 Back	Back / Return	 RETURN BACK	Back / Return
 Down	Down	 Down	Down
 Portal	Smart / List	 LIST SMART	Smart / List
 <<	<< / Tune-	 TUNE-	<< / Tune-



