



Originale	Sostituto
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + CH- /
	 I<< / Preset-
	 Shift + Sleep / Timer
	 0
	 Shift + CH+ /
	 >>I / Preset+

Originale	Sostituto
	 Info / Angle
	 Subtitle / EQ
	 Audio / Lang I/II
	 Smart / List
	 Vol+
	 Setup / OPT /
	 CH+ / Page+
	 Vol-
	 TV/Radio /
	 CH- / Page-
	 Text / Goto
	 Fav / Marker / PC
	 Guide / EPG / -/-
	 Exit / Cancel / Clear
	 Up
	 Left
	 OK





Originale	Sostituto	Originale	Sostituto
	Right		Right
	Menu		Menu / Home
	Down		Down
	Recall		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	>		Shift + Pause / Step /
	Film		Display / Media
	Zoom		Zoom / Size
			Timer
			Sleep / Timer
			USB
			Shift + 8
			USB
			AV / Input / RDS

