



 



 





















































































 

 





Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 TUNER 1	 1
 CD	 Shift + 3	 TUNER 2	 2
 TAPE	 Shift + 5	 TUNER 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR 1	 Shift + 4	 TUNER 4	 4
 VCR 2	 Shift + 7	 TUNER 5	 5
 CH Level-	 CH- / Page-	 TUNER 6	 6
 CH Level+	 CH+ / Page+	 TUNER ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-







 



 





























































	Originale	Sostituto
	TUNER 7	 7
	TUNER 8	 8
	TUNER 9	 9
	TUNER 0	 0
	TAPE <<	 << / Tune-
	TAPE >>	 >> / Tune+
	TAPE Deck 1/2	 OK
	TAPE Rev. Play	 Left
	TAPE Pause	 Pause / Step / Freeze
	TAPE Stop	 Stop / Hold
	TAPE Play	 Play / Slow
	TAPE Play	 Right
	Muting	 Mute / Dimmer
	Volume-	 Vol-
	Volume+	 Vol+

	Originale	Sostituto























 



 





Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 CD 1	 1
 CD	 Shift + 3	 CD 2	 2
 TAPE	 Shift + 5	 CD 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 CD 4	 4
 VCR 2	 Shift + 7	 CD 5	 5
 CH Level-	 CH- / Page-	 CD 6	 6
 CH Level+	 CH+ / Page+	 CD ≥=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-





























 



 

 

 








 
 
 
 


 




















	Originale	Sostituto	
	CD 7		7
	CD 8		8
	CD 9		9
	CD 0		0
	CD I<<		I<< / Preset-
	CD >>I		>>I / Preset+
	CD <<		<< / Tune-
	CD >>		>> / Tune+
	CD Pause		Pause / Step / Freeze
	CD Stop		Stop / Hold
	CD Play		Play / Slow
	Muting		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+

Originale	Sostituto





















 









Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 3 Stereo	 Audio / Lang I/II
 Power Audio	 Red / Netflix / Search	 Test	 Text / Goto
 Power TV	 Blue / Prime Video / Random	 CH Select	 Setup / OPT /
 Power VCR	 Shift + Red / Netflix /	 Help	 Info / Angle
 Power VDP	 Yellow / YouTube / Repeat	 Disc	 Smart / List
 Power CD	 Green / APP / Repeat	 Disc Enter	 Display / Media
 Power TAPE	 Shift + Green / APP /	 TV / AV	 AV / Input / RDS
 TUNER	 Shift + 6	 VDP 1	 1
 CD	 Shift + 3	 VDP 2	 2
 TAPE	 Shift + 5	 VDP 3	 3
 TV	 Shift + 1	 Direct Tuning	 Menu / Home
 VDP / VDP 6CH	 Shift + 2	 TV Vol+	 Shift + Vol+
 VCR1	 Shift + 4	 VDP 4	 4
 VCR 2	 Shift + 7	 VDP 5	 5
 CH Level-	 CH- / Page-	 VDP 6	 6
 CH Level+	 CH+ / Page+	 VDP >=10	 Guide / EPG / -/-
 Surround	 Eject / Surround	 TV Vol-	 Shift + Vol-





	Originale	Sostituto	Originale	Sostituto
	VDP 7	 7		
	VDP 8	 8		
	VDP 9	 9		
	VDP 0	 0		
	VDP I<<	 I<< / Preset-		
	VDP >>I	 >>I / Preset+		
	VDP <<	 << / Tune-		
	VDP >>	 >> / Tune+		
	VDP Pause	 Pause / Step / Freeze		
	VDP Stop	 Stop / Hold		
	VDP Play	 Play / Slow		
	Muting	 Mute / Dimmer		
	Volume-	 Vol-		
	Volume+	 Vol+		

























Originale	Sostituto	Originale	Sostituto
Power Receiver	Power	3 Stereo	Audio / Lang I/II
Power Audio	Red / Netflix / Search	Test	Text / Goto
Power TV	Blue / Prime Video / Random	CH Select	Setup / OPT /
Power VCR	Shift + Red / Netflix /	Help	Info / Angle
Power VDP	Yellow / YouTube / Repeat	Disc	Smart / List
Power CD	Green / APP / Repeat	Disc Enter	Display / Media
Power TAPE	Shift + Green / APP /	TV / AV	AV / Input / RDS
TUNER	Shift + 6	VCR 1 1	1
CD	Shift + 3	VCR 1 2	2
TAPE	Shift + 5	VCR 1 3	3
TV	Shift + 1	Direct Tuning	Menu / Home
VDP / VDP 6CH	Shift + 2	TV Vol+	Shift + Vol+
VCR1	Shift + 4	VCR 1 4	4
VCR 2	Shift + 7	VCR 1 5	5
CH Level-	CH- / Page-	VCR 1 6	6
CH Level+	CH+ / Page+	VCR 1 ≥=10	Guide / EPG / -/-
Surround	Eject / Surround	TV Vol-	Shift + Vol-





	Originale	Sostituto		Sostituto
	VCR 1 7		7	
	VCR 1 8		8	
	VCR 1 9		9	
	VCR 1 0		0	
	VCR 1 <<		<< / Tune-	
	VCR 1 >>		>> / Tune+	
	VCR 1 Pause		Pause / Step / Freeze	
	VCR 1 Stop		Stop / Hold	
	VCR 1 Play		Play / Slow	
	Muting		Mute / Dimmer	
	Volume-		Vol-	
	Volume+		Vol+	

Originale	Sostituto

