 







 

 

 











 



















 


 















 



 



 





























Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 BT	 1
 BT	 9
 OPTICAL	 2
 HDMI	 0
 HDMI	 3
 LINE IN	 4
 +	 Vol+
 +	 Up
 I<<	 << / Tune-
 I<<	 I<< / Preset-
 >	 Pause / Step / Freeze
 >	 OK
 >	 Play / Slow
 >>	 >> / Tune+
 >>	 >> / Preset+

Originale	Sostituto
 -	 Vol-
 -	 Down
 USB	 8
 USB	 5
 3D	 Back / Return
 RESET	 Exit / Cancel / Clear
 GENERAL	 Menu / Home
 VOICE	 Info / Angle
 TREBLE	 Display / Media
 BT EX.	 Smart / List
 TREBLE+	 CH+ / Page+
 TREBLE-	 CH- / Page-





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 BT	 9
 BT	 1
 OPTICAL	 2
 AUX/USB	 8
 AUX/USB	 4
 +	 Vol+
 I<<	 I<< / Preset-
 I<<	 << / Tune-
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 Play/Pause	 OK
 >>I	 >>I / Preset+
 >>I	 >> / Tune+
 -	 Vol-
 General	 Menu / Home

Originale	Sostituto
 Voice	 Info / Angle
 3D/Reset	 Exit / Cancel / Clear
 Treble	 Display / Media
 Treble+	 Up
 Treble-	 Down

