



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Sel	 Smart / List
 3	 3	 Down	 Down
 4	 4	 FAV	 Fav / Marker / PC
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Red/Subtitle	 Red / Netflix / Search
 8	 8	 AV	 AV / Input / RDS
 9	 9	 TV/R	 TV/Radio /
 Quality/P-	 CH- / Page-	 Blue/Info	 Blue / Prime Video / Random
 0	 0	 Green/PIP	 Green / APP / Repeat
 Recall/P+	 CH+ / Page+	 Yellow/EPG	 Yellow / YouTube / Repeat
 Menu	 Menu / Home		
 Exit	 Exit / Cancel / Clear		
 Up	 Up		

Originale	Sostituto	Originale	Sostituto
 Left	 Left	 Left	 Left
 OK	 OK	 Left	 Left
 Right	 Right	 Right	 Right
 Sel	 Smart / List	 Sel	 Smart / List
 Down	 Down	 Down	 Down
 FAV	 Fav / Marker / PC	 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II	 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze	 Pause	 Pause / Step / Freeze
 Red/Subtitle	 Red / Netflix / Search	 Red/Subtitle	 Red / Netflix / Search
 AV	 AV / Input / RDS	 AV	 AV / Input / RDS
 TV/R	 TV/Radio /	 TV/R	 TV/Radio /
 Blue/Info	 Blue / Prime Video / Random	 Blue/Info	 Blue / Prime Video / Random
 Green/PIP	 Green / APP / Repeat	 Green/PIP	 Green / APP / Repeat
 Yellow/EPG	 Yellow / YouTube / Repeat	 Yellow/EPG	 Yellow / YouTube / Repeat

