

 
 



 
 
 
 




 
 

 
 
 

 
 
 



 




 

 

 
 
 

 

 


 
 
 

 
 

 

 
 





| Originale | Sostituto |
|---|--|
|  On/Standby |  Power |
|  Display |  Display / Media |
|  CD |  Shift + 3 |
|  Tuner/Band |  Shift + 6 |
|  AUX |  Shift + 7 |
|  Random/Repeat |  Blue / Prime Video / Random |
|  <</Tuning |  << / Tune- |
|  >>/Tuning Up |  >> / Tune+ |
|  I<</Preset |  I<< / Preset- |
|  >>I/Preset Up |  >>I / Preset+ |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Memory |  OK |
|  1 |  1 |
|  Clear |  Exit / Cancel / Clear |
|  2 |  2 |

| Originale | Sostituto |
|---|---|
|  3 |  3 |
|  Clock |  TV/Radio / |
|  4 |  4 |
|  Timer |  Shift + Sleep / Timer |
|  5 |  5 |
|  Sleep |  Sleep / Timer |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Shift |  Smart / List |
|  0 |  0 |
|  +10 |  Guide / EPG / -/- |
|  Bass/Treble |  Audio / Lang I/II |
|  Volume- |  Vol- |
|  Volume+ |  Vol+ |

