

 


 



 


 
 
 

 
 
 
 
 
 

 

 
 
 
 
 

 



 








Originale	Sostituto
 On/Standby	 Power
 Display	 Display / Media
 CD	 Shift + 3
 Tuner/Band	 Shift + 6
 AUX	 Shift + 7
 Random/Repeat	 Blue / Prime Video / Random
 <</Tuning	 << / Tune-
 >>/Tuning Up	 >> / Tune+
 I<</Preset	 I<< / Preset-
 >>I/Preset Up	 >>I / Preset+
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Memory	 OK
 1	 1
 Clear	 Exit / Cancel / Clear
 2	 2

Originale	Sostituto
 3	 3
 Clock	 TV/Radio /
 4	 4
 Timer	 Shift + Sleep / Timer
 5	 5
 Sleep	 Sleep / Timer
 6	 6
 7	 7
 8	 8
 9	 9
 Shift	 Smart / List
 0	 0
 +10	 Guide / EPG / -/-
 Bass/Treble	 Audio / Lang I/II
 Volume-	 Vol-
 Volume+	 Vol+

