



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
I-II	Audio / Lang I/II
Scale	Smart / List
Sleep	Sleep / Timer
Display	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Jump	Back / Return

Originale	Sostituto
0	0
ENT	Fav / Marker / PC
Vol+	Vol+
TV	TV/Radio /
TV	Shift + 1
CH+	CH+ / Page+
Vol-	Vol-
Input	AV / Input / RDS
CH-	CH- / Page-
Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home
Left	Left
OK	OK
Right	Right
S.Mode	Sound / Title
Down	Down





Originale	Sostituto
P. Mode	Picture / Format
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text Index	Info / Angle
Text Reveal	Subtitle / EQ
Text Size	Zoom / Size
Text Hold	Stop / Hold

Originale	Sostituto

