

















 












Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	1		1		Left		Left
	2		2		OK		OK
	3		3		P-		CH- / Page-
	4		4		Down		Down
	5		5		AUX		Shift + 7
	6		6		TXT		Text / Goto
	7		7		Red/Picture		Red / Netflix / Search
	8		8		Green/Timer		Green / APP / Repeat
	9		9		Yellow/Format		Yellow / YouTube / Repeat
	i		Info / Angle		Blue/Audio		Blue / Prime Video / Random
	0/AV		0		Colour-		<< / Tune-
	Mute		Mute / Dimmer		Colour+		>> / Tune+
	Up		Up		Brightness-		I<< / Preset-
	P+		CH+ / Page+		Brightness+		>>I / Preset+
	Vol+		Vol+				
	Right		Right				






Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	1		1		Left		Left
	2		2		OK		OK
	3		3		P-		CH- / Page-
	4		4		Down		Down
	5		5		AUX	+	Shift + 7
	6		6		TXT		Text / Goto
	7		7		Red/Picture		Red / Netflix / Search
	8		8		Green/Timer		Green / APP / Repeat
	9		9		Yellow/Format		Yellow / YouTube / Repeat
	i		Info / Angle		Blue/Audio		Blue / Prime Video / Random
	0/AV		0		Colour-		<< / Tune-
	Mute		Mute / Dimmer		Colour+		>> / Tune+
	Up		Up		Brightness-		I<< / Preset-
	P+		CH+ / Page+		Brightness+		>>I / Preset+
	Right		Right				
	Vol+		Vol+				





Originale	Sostituto
 Power	 Power
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 P+	 CH+ / Page+
 >>	 >> / Tune+
 <<	 << / Tune-
 Play	 Play / Slow
 P-	 CH- / Page-
 AUX	 7
 TXT	 Text / Goto

Originale	Sostituto

