 

















Originale		Sostituto		Originale		Sostituto	
	OSD		Smart / List		Angle		Info / Angle
	Search		Red / Netflix / Search		Audio		Audio / Lang I/II
	Mute		Mute / Dimmer		PBC		D.Menu / Top
	Source		AV / Input / RDS		Title		Sound / Title
	1		1		Up		Up
	2		2		Stop		Stop / Hold
	3		3		Play		Play / Slow
	4		4		Pause		Pause / Step / Freeze
	5		5		Left		Left
	6		6		Enter		OK
	7		7		Right		Right
	8		8		Slow		Shift + Play /
	9		9		Setup		Setup / OPT /
	0		0		Down		Down
	10+		Guide / EPG / -/--		Zoom		Zoom / Size
	Step		Shift + Pause / Step /		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Repeat		Green / APP / Repeat





Originale		Sostituto	
	AB		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Program		TV/Radio /
	Display		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+

Originale		Sostituto	

