















 



 







 



 



 





 

 

 






 



 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Back	 Back / Return
 [::]	 D.Menu / Top	 Down	 Down
 Netflix	 Red / Netflix / Search	 Home	 Menu / Home
 prime video	 Blue / Prime Video / Random	 Vol+	 Vol+
 You Tube	 Yellow / YouTube / Repeat	 Smart	 Smart / List
 Google Play	 Green / APP / Repeat	 CH+	 CH+ / Page+
 <<	 << / Tune-	 Vol-	 Vol-
 Play	 Play / Slow	 CH-	 CH- / Page-
 Pause	 Pause / Step / Freeze	 1	 1
 >>	 >> / Tune+	 2	 2
 Rec	 Rec / Rec Mode	 3	 3
 Guía	 Guide / EPG / -/--	 4	 4
 Up	 Up	 5	 5
 TV	 TV/Radio /	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9

Originale	Sostituto	Originale	Sostituto
 Back	 Back / Return	 Down	 Down
 Home	 Menu / Home	 Vol+	 Vol+
 Smart	 Smart / List	 CH+	 CH+ / Page+
 Vol-	 Vol-	 CH-	 CH- / Page-
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
6	6	7	7
7	7	8	8
8	8	9	9
9	9	TV	TV
TV	TV	DVD	DVD
DVD	DVD	SAT	SAT
SAT	SAT	AUX	AUX
AUX	AUX	SLOW	SLOW
SLOW	SLOW	STEP-FREEZE	STEP-FREEZE
STEP-FREEZE	STEP-FREEZE	HOLD	HOLD
HOLD	HOLD	REC MODE	REC MODE
REC MODE	REC MODE	TUNE-	TUNE-
TUNE-	TUNE-	TUNE+	TUNE+
TUNE+	TUNE+	PRESET-	PRESET-
PRESET-	PRESET-	PRESET+	PRESET+
PRESET+	PRESET+	TITLE	TITLE
TITLE	TITLE	LANG VUI	LANG VUI
LANG VUI	LANG VUI	EQ	EQ
EQ	EQ	SURROUND	SURROUND
SURROUND	SURROUND	SOUND	SOUND
SOUND	SOUND	AUDIO	AUDIO
AUDIO	AUDIO	SUBTITLE	SUBTITLE
SUBTITLE	SUBTITLE	TIMER	TIMER
TIMER	TIMER	PROGRAM	PROGRAM
PROGRAM	PROGRAM	PICTURE	PICTURE
PICTURE	PICTURE	ZOOM	ZOOM
ZOOM	ZOOM	SLEEP	SLEEP
SLEEP	SLEEP	TV RADIO	TV RADIO
TV RADIO	TV RADIO	TOP MENU	TOP MENU
TOP MENU	TOP MENU	OPT-TOOLS	OPT-TOOLS
OPT-TOOLS	OPT-TOOLS	GOTO	GOTO
GOTO	GOTO	RDS	RDS
RDS	RDS	D.MENU	D.MENU
D.MENU	D.MENU	SETUP	SETUP
SETUP	SETUP	TEXT	TEXT
TEXT	TEXT	AV INPUT	AV INPUT
AV INPUT	AV INPUT	HOME	HOME
HOME	HOME	ANGLE	ANGLE
ANGLE	ANGLE	MENU	MENU
MENU	MENU	OK	OK
OK	OK	RETURN	RETURN
RETURN	RETURN	CLEAR	CLEAR
CLEAR	CLEAR	EXIT	EXIT
EXIT	EXIT	CANCEL	CANCEL
CANCEL	CANCEL	LIST	LIST
LIST	LIST	SMART	SMART
SMART	SMART	MEDIA	MEDIA
MEDIA	MEDIA	DISPLAY	DISPLAY
DISPLAY	DISPLAY	TV	TV
TV	TV	DVD	DVD
DVD	DVD	CD-STB	CD-STB
CD-STB	CD-STB	VIDEO	VIDEO
VIDEO	VIDEO	TAPE	TAPE
TAPE	TAPE		

