


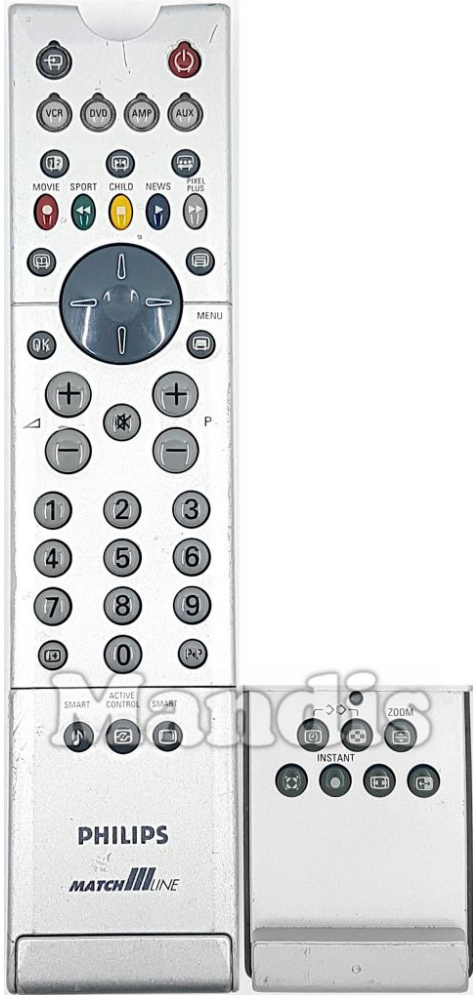








 


 





 
 


Originale	Sostituto
Input	AV / Input / RDS
Power	Power
VCR	Shift + 4
DVD	Shift + 2
AMP	Shift + 5
AUX	Shift + 7
[12]	Picture / Format
[> <]	Shift + Zoom /
[...]	Subtitle / EQ
Red/Rec/Movie	Red / Netflix / Search
Green/<</Sport	Green / APP / Repeat
Yellow/Stop/Child	Yellow / YouTube / Repeat
Blue/Play/News	Blue / Prime Video / Random
>>/Pixel Plus button"/> >>/Pixel Plus	>> / Tune+
Guide	Guide / EPG / -/--
Up	Up
[=]	Text / Goto


Originale	Sostituto
Left	Left
Right	Right
OK	OK
Down	Down
Menu	Menu / Home
Vol+	Vol+
P+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
P-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7





	Originale	Sostituto	Originale	Sostituto
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P	 Fav / Marker / PC		
	♪ Smart	 Sound / Title		
	[-o-]/Active Control	 D.Menu / Top		
	[ ] Smart	 Smart / List		
	[o]	 TV/Radio /		
	Setup	 Setup / OPT /		
	[+]	 Display / Media		
	[♦]/Zoom	 Zoom / Size		
	[ ]	 Audio / Lang I/II		
	Instant	 Back / Return		
	[<>]	 Sleep / Timer		
	[↔]	 Eject / Surround		




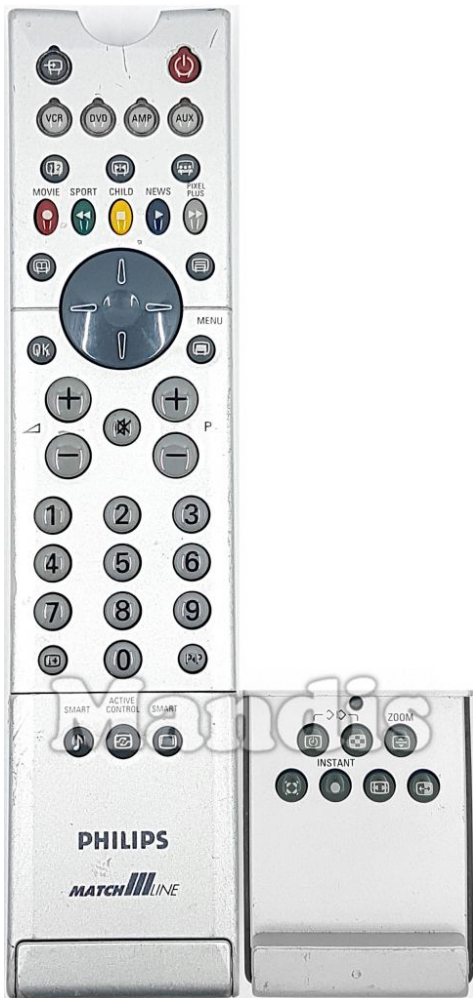







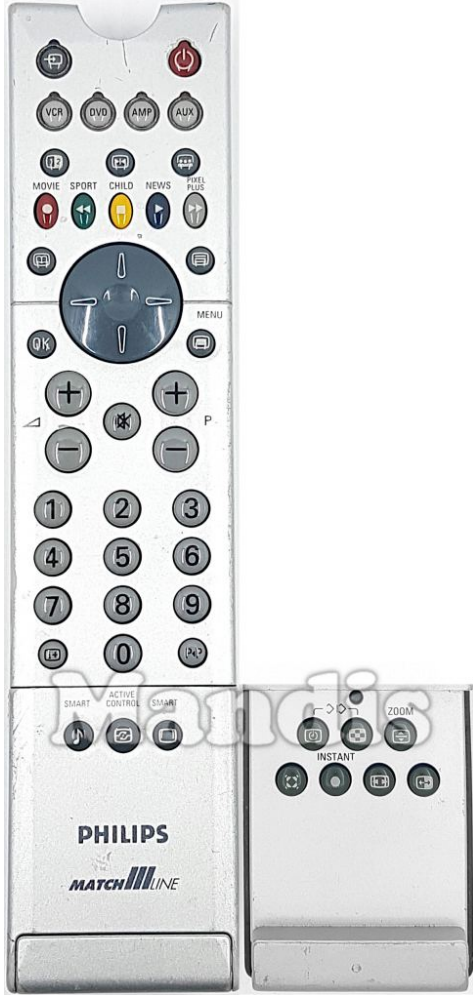



Originale	Sostituto
Input	AV / Input / RDS
Power	Power
VCR	Shift + 4
DVD	Shift + 2
AMP	Shift + 5
AUX	Shift + 7
[ > < ]	Zoom / Size
[ ... ]	Subtitle / EQ
Red/Rec/Movie	Red / Netflix / Search
Green/Left/Sport	Green / APP / Repeat
Yellow/Stop/Child	Yellow / YouTube / Repeat
Blue/Play/News	Blue / Prime Video / Random
>>/Pixel Plus	>> / Tune+
Guide	Guide / EPG / -/--
Up	Up
[=]	Text / Goto
Left	Left

Originale	Sostituto
Right	Right
OK	OK
Down	Down
Menu	Menu / Home
Vol+	Vol+
P+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
P-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8






	Originale	Sostituto		Originale	Sostituto
	9	 9			
	[i+]	 Info / Angle			
	0	 0			
	P<P	 Fav / Marker / PC			
	[o]	 Smart / List			

	Originale	Sostituto




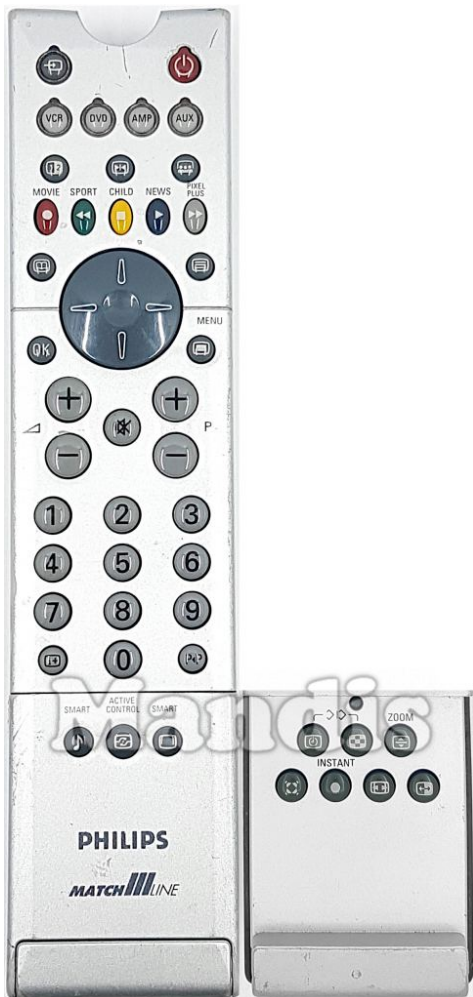






Originale	Sostituto
Input	AV / Input / RDS
Power	Power
VCR	Shift + 4
DVD	Shift + 2
AMP	Shift + 5
AUX	Shift + 7
[ > < ]	Zoom / Size
[ ... ]	Subtitle / EQ
Red/Rec/Movie	Red / Netflix / Search
Green/←/Sport	Green / APP / Repeat
Yellow/Stop/Child	Yellow / YouTube / Repeat
Blue/Play/News	Blue / Prime Video / Random
>>/Pixel Plus	>> / Tune+
Guide	Guide / EPG / -/-
Up	Up
[=]	Text / Goto
Left	Left

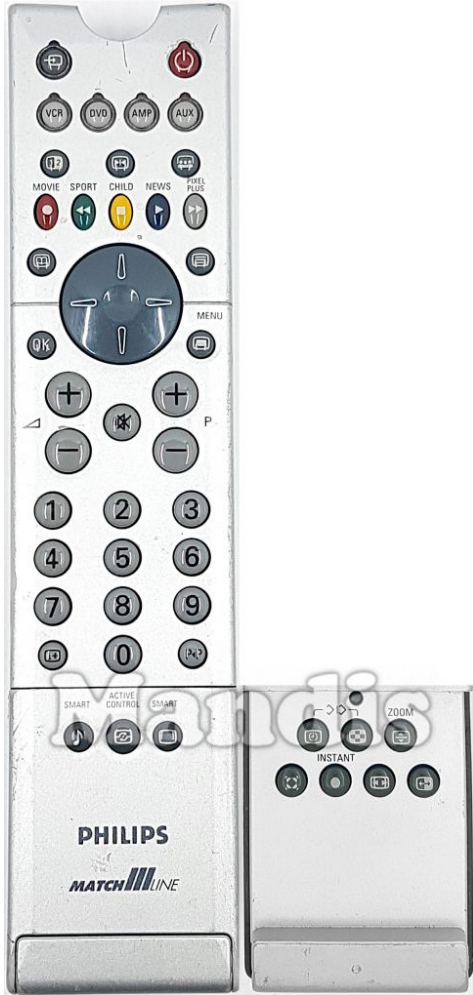
Originale	Sostituto
Right	Right
OK	OK
Down	Down
Menu	Menu / Home
Vol+	Vol+
P+	CH+ / Page+
Vol-	Vol-
Mute	Mute / Dimmer
P-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8





Originale	Sostituto	Originale	Sostituto
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC



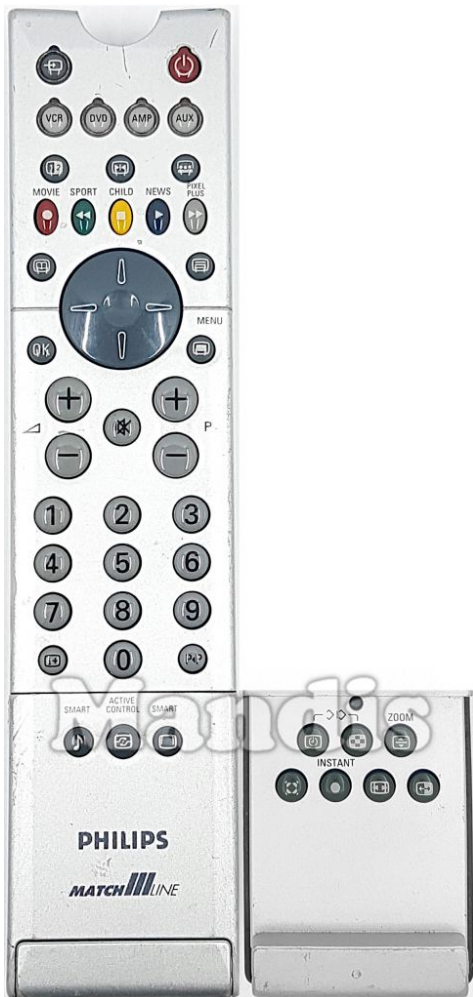

	Originale	Sostituto	Originale	Sostituto
	Input	AV / Input / RDS		Vol+
	Power	Power		CH+ / Page+
	VCR	Shift + 4		Vol-
	DVD	Shift + 2		Mute / Dimmer
	AMP	Shift + 5		CH- / Page-
	AUX	Shift + 7		1
	[...]	Subtitle / EQ		2
	Green/Left/Sport	Green / APP / Repeat		3
	>>/Pixel Plus	>> / Tune+		4
	Guide	Guide / EPG / -/--		5
	Up	Up		6
	[=]	Text / Goto		7
	Left	Left		8
	Right	Right		9
	OK	OK		0
	Down	Down		Fav / Marker / PC
	Menu	Menu / Home		

