

 

 



 

 

 

 

 

 

 

 

 

 

 





| Originale | Sostituto | Originale | Sostituto |
|---|----------------|---|-----------------------------|
|  | Power |  | Power |
|  | TV |  | 1 |
|  | BD/DVD |  | 2 |
|  | Analog |  | 3 |
|  | Portable |  | 4 |
|  | Bluetooth |  | 9 |
|  | Bluetooth |  | Fav / Marker / PC |
|  | Clear Voice |  | Exit / Cancel / Clear |
|  | Univolume |  | Smart / List |
|  | Audio Delay |  | Audio / Lang I/II |
|  | Movie |  | Red / Netflix / Search |
|  | Music |  | Green / APP / Repeat |
|  | Sports |  | Yellow / YouTube / Repeat |
|  | Game |  | Blue / Prime Video / Random |
|  | Tv Program |  | Guide / EPG / -/-- |
|  | Stereo |  | Sound / Title |
|  | YSP Position L |  | Left |

| Originale | Sostituto | Originale | Sostituto |
|---|----------------------------|---|------------------|
|  | YSP Position C |  | OK |
|  | YSP Position R |  | Right |
|  | Subwoofer+ |  | CH+ / Page+ |
|  | Volume+ |  | Vol+ |
|  | Subwoofer- |  | CH- / Page- |
|  | Mute |  | Mute / Dimmer |
|  | Volume- |  | Vol- |
|  | CH Level |  | AV / Input / RDS |
|  | Tv Remote Control Learn |  | TV/Radio / |
|  | Tv Remote Control Repeater |  | Zoom / Size |

