





















 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 TV/Radio /
 V-	 Vol-	 Exit	 Exit / Cancel / Clear
 V-	 Left	 Av	 AV / Input / RDS
 Menu	 Menu / Home	 Red	 Red / Netflix / Search
 Menu	 OK	 Green	 Green / APP / Repeat
 V+	 Vol+	 Yellow	 Yellow / YouTube / Repeat
 V+	 Right	 Blue	 Blue / Prime Video / Random
 P-	 CH- / Page-	 ≡Text	 Text / Goto
 P-	 Down		



