











 

 

 

 









 

 





 








 

 

 

 



















| Originale | Sostituto | Originale | Sostituto |
|---|--|--|---|
|  Power |  Power |  P+ |  Up |
|  1 |  1 |  V- |  Vol- |
|  2 |  2 |  V- |  Left |
|  3 |  3 |  Menu |  Menu / Home |
|  4 |  4 |  Menu |  OK |
|  5 |  5 |  V+ |  Vol+ |
|  6 |  6 |  V+ |  Right |
|  7 |  7 |  P- |  CH- / Page- |
|  8 |  8 |  P- |  Down |
|  9 |  9 |  Tv |  TV/Radio / |
|  Mute |  Mute / Dimmer |  Exit |  Exit / Cancel / Clear |
|  0 |  0 |  Av |  AV / Input / RDS |
|  16:9 |  Picture / Format |  Red |  Red / Netflix / Search |
|  S/M/D |  Display / Media |  Green |  Green / APP / Repeat |
|  PP |  Back / Return |  Yellow |  Yellow / YouTube / Repeat |
|  →← |  Smart / List |  Blue |  Blue / Prime Video / Random |
|  P+ |  CH+ / Page+ |  ≡Text |  Text / Goto |

| Originale | Sostituto | Originale | Sostituto |
|--|---|--|--|
|  P+ |  Up |  TV |  DVD |
|  V- |  Vol- |  V- |  SAT |
|  V- |  Left |  Menu |  AUX |
|  Menu |  Menu / Home |  Menu |  SLOW STEP-FREEZE |
|  Menu |  OK |  V+ |  HOLD |
|  V+ |  Vol+ |  V+ |  REC MODE |
|  V+ |  Right |  P- |  PRESET- |
|  P- |  CH- / Page- |  P- |  PRESET+ |
|  P- |  Down |  Tv |  TITLE |
|  Tv |  TV/Radio / |  Exit |  LANG UI |
|  Exit |  Exit / Cancel / Clear |  Av |  EQ |
|  Av |  AV / Input / RDS |  Red |  SURROUND |
|  Red |  Red / Netflix / Search |  Green |  SOUND |
|  Green |  Green / APP / Repeat |  Yellow |  AUDIO |
|  Yellow |  Yellow / YouTube / Repeat |  Blue |  SUBTITLE |
|  Blue |  Blue / Prime Video / Random |  ≡Text |  TIMER |
|  ≡Text |  Text / Goto | |  PROGRAM |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|-------------|-----------|--------------------|-----------|--|-----------|--|
| | /≡Mix | | Audio / Lang I/II | | | | |
| | ≡☺Time Page | | Subtitle / EQ | | | | |
| | Info | | Info / Angle | | | | |
| | ≡i | | Guide / EPG / -/-- | | | | |
| | ≡+ | | Fav / Marker / PC | | | | |
| | ≡◆ | | Setup / OPT / | | | | |
| | ≡x Cancel | | Zoom / Size | | | | |
| | ≡? Reveal | | D.Menu / Top | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

