







 





 



 




 






 







 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 DVD
 V-	 Left	 Exit	 SAT
 Menu	 Menu / Home	 Av	 AUX
 Menu	 OK	 Red	 REC MODE
 V+	 Vol+	 Green	 SLOW STEP-FREEZE
 V+	 Right	 Yellow	 HOLD
 P-	 CH- / Page-	 Blue	 PRESET-
 P-	 Down	 ≡Text	 PRESET+
 Tv	 TV/Radio /	 ≡Text	 EQ SURROUND
 Exit	 Exit / Cancel / Clear	 GOTO TEXT	 TITLE LANG UI
Av	AV / Input / RDS		 EQ SURROUND
Red	Red / Netflix / Search		SOUND AUDIO
Green	Green / APP / Repeat		FORMAT SIZE
Yellow	Yellow / YouTube / Repeat		TIMER PROGRAM
Blue	Blue / Prime Video / Random		PICTURE ZOOM
≡Text	Text / Goto		SLEEP TV RADIO
			TOP MENU OPT-TOOLS
			GOTO TEXT
			RDS AV INPUT
			D.MENU SETUP
			 HOME MENU
			 ANGLE INFO
			 HOME MENU
			 DIMMER MUTE
			 SHIFT
			 POWER





Originale	Sostituto
 /≡Mix	 Audio / Lang I/II
 ≡☺Time Page	 Subtitle / EQ
 Info	 Info / Angle
 i	 Guide / EPG / -/--
 ≡+	 Fav / Marker / PC
 ≡◇	 Setup / OPT /
 ≡x Cancel	 Zoom / Size
 ≡? Reveal	 D.Menu / Top

Originale	Sostituto

