 

 



 





 

 

 

 

 


 
 

 
 
 

 





Originale	Sostituto
 Power	 Power
 www	 Display / Media
 e-mail	 Smart / List
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+
 Home	 Shift + Menu /
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 Info	 Info / Angle
 Ch-	 CH- / Page-
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >> / Preset+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play	 Play / Slow



 





 

 





 

 

 

 

 

 





 

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Up	 Up
 Check	 Fav / Marker / PC
 Left	 Left
 Ok	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Tv/Radio	 TV/Radio /
 Search	 Shift + Red / Netflix /
 Resolution	 Subtitle / EQ
 Red/Sub-t	 Red / Netflix / Search
 Green/Text	 Green / APP / Repeat
 Text	 Text / Goto





Originale

Sostituto

	Yellow/Lang		Yellow / YouTube / Repeat
	Blue/I-Key		Blue / Prime Video / Random
	Usb		Shift + 8
	Uhf		Audio / Lang I/II
	Aux		Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Back/Del		Back / Return
	0		0
	Caps/Num		D.Menu / Top

Originale

Sostituto

