


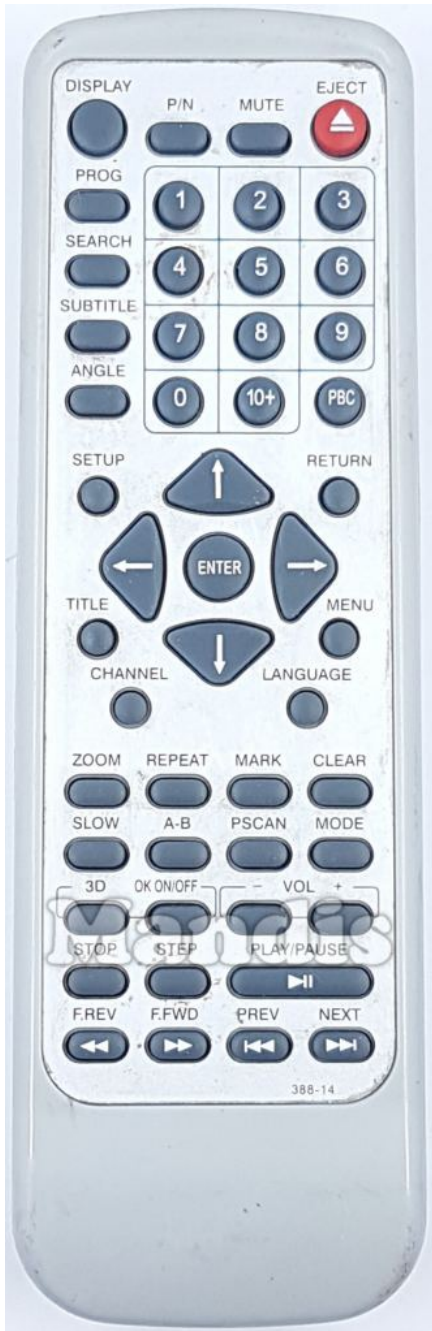

Originale	Sostituto
 Display	 Display / Media
 P/N	 Smart / List
 Mute	 Mute / Dimmer
 Eject	 Eject / Surround
 Prog	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Search	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Subtitle	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle

Originale	Sostituto
 0	 0
 10+	 Guide / EPG / -/-
 PBC	 AV / Input / RDS
 Setup	 Setup / OPT /
 Up	 Up
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 Menu	 Menu / Home
 Channel	 D.Menu / Top
 Language	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Repeat	 Green / APP / Repeat
 Mark	 Fav / Marker / PC





Originale		Sostituto	
	Clear		Exit / Cancel / Clear
	Slow	+	Shift + Play /
	A-B		Yellow / YouTube / Repeat
	PScan		Text / Goto
	Mode		Blue / Prime Video / Random
	3D		Picture / Format
	OK On/Off		Power
	Vol-		Vol-
	Vol+		Vol+
	Stop		Stop / Hold
	Step	+	Shift + Pause / Step /
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<</F.REV		<< / Tune-
	>>/F.FWD		>> / Tune+
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+

Originale	Sostituto

