






















 
































 





 













Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 List	 Smart / List
 9	 9	 Vol-	 Vol-
 FAV	 Fav / Marker / PC	 Sub	 Subtitle / EQ
 0	 0	 Red	 Red / Netflix / Search
 ALT	 Display / Media	 Lang	 Shift + Audio / Lang I/II
 EPG	 Guide / EPG / -/--	 Blue	 Blue / Prime Video / Random
 Info	 Info / Angle	 Text	 Text / Goto
 Menu	 Menu / Home	 Green	 Green / APP / Repeat

Originale	Sostituto	Originale	Sostituto
 DIMMER MUTE	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 VOL+	 SMART	 MEDIA	 CH PAGE
 TV	 DISPLAY	 EQ	 VOL-
 DVD	 SUBTITLE	 NETFLIX	 TV
 CD - STB	 SEARCH	 SHIFT + LANG I/II	 DVD
 VIDEO	 HDMI - SAT	 Prime Video	 CD - STB
 AUX - HDD	 FAV MARKER	 RANDOM	 AUX - HDD
 USB	 GUIDE EPG	 REPEAT	 USB
BLUETOOTH	REPEAT A-B	RANDOM	BLUETOOTH





	Originale	Sostituto	
	Audio	Audio / Lang I/II	
	Yellow	Yellow / YouTube / Repeat	
	Pause	Pause / Step / Freeze	
	Preview	Back / Return	
	Tv/Radio	TV/Radio /	
	Game	AV / Input / RDS	
	Auto Scan	Zoom / Size	

Originale	Sostituto

