



Originale	Sostituto
Power	Power
USB	Shift + 8
Reset	Smart / List
Open/Close	Eject / Surround
Language	Audio / Lang I/II
Angle	Info / Angle
Subtitle	Subtitle / EQ
Vol+	Vol+
Return	Back / Return
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Vol-	Vol-
Step	Shift + Pause / Step /
Slow	Shift + Play /
PBC	D.Menu / Top
Mute	Mute / Dimmer
Setup	Setup / OPT /

Originale	Sostituto
OSD	Display / Media
Up	Up
Left	Left
Enter	OK
Right	Right
Title	Sound / Title
Down	Down
R/L	Blue / Prime Video / Random
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
I<<	I<< / Preset-
N/P	Sleep / Timer
Stop	Stop / Hold
>>	>> / Tune+
>>I	>>I / Preset+
V-Mode	Picture / Format





Originale		Sostituto	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
10	10	HDMI - SAT 0	0
10+	10+	GUIDE EPG / -/-	Guide / EPG / -/-
GOTO	Goto	GOTO TEXT	Text / Goto
PROG	Prog	PROGRAM TV / RADIO	TV/Radio /
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
MENU	Menu	HOME MENU	Menu / Home

Originale		Sostituto	

