









 

Originale	Sostituto
 Power	 Power
 TXT	 Text / Goto
 MIX	 Smart / List
 Size	 Zoom / Size
 Index	 Info / Angle
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subcode	 Display / Media
 Cancel	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Red/P.M.	 Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Yellow/Sleep	 Yellow / YouTube / Repeat
 Green/S.M.	 Green / APP / Repeat
 CH-	 CH- / Page-
 Vol-	 Vol-
 Blue/Call	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Select	 OK





Originale	Sostituto
	 Right
	 Exit / Cancel / Clear
	 Down
	 Mute / Dimmer
	 Picture / Format
	 Setup / OPT /
	 Subtitle / EQ
	 Fav / Marker / PC
	 TV/Radio /
	 Guide / EPG / -/--
	 Audio / Lang I/II
	 Sound / Title
	 Shift + 2
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Eject / Surround

Originale	Sostituto
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >>I / Preset+

