






Originale	Sostituto
 On	 Power
 Standby	 Shift + Power
 Home	 Shift + Menu /
 Blank	 Display / Media
 HDMI 1	 1
 HDMI 2	 2
 P-in-P/Swap	 3
 PC	 Fav / Marker / PC
 LAN	 5
 Wireless HD	 6
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Link Menu	 D.Menu / Top

Originale	Sostituto
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 HDMI Link	 Smart / List
 Volume-	 Vol-
 Volume+	 Vol+
 Lens	 TV/Radio /
 Color Mode	 Setup / OPT /
 Image Enh	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Default	 Back / Return
 Down	 Down
 Esc	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Memory	 Red / Netflix / Search





	Originale	Sostituto	Originale	Sostituto
		Lens 1		Green / APP / Repeat
		Lens 2		Yellow / YouTube / Repeat
		Frame Int		Blue / Prime Video / Random
		RGBCMY		Text / Goto
		Pattern		Subtitle / EQ
		User		Info / Angle
		3D Format		Picture / Format
		Aspect		Zoom / Size
		Power Tv		Shift + OK
		Output Tv		Shift + AV / Input / RDS
		Input Tv		AV / Input / RDS

