



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
Lang	Audio / Lang I/II
4	4
5	5
6	6
Time Shift	D.Menu / Top
7	7
8	8
9	9
Tv/Radio	TV/Radio /
FAV	Fav / Marker / PC
0	0
Recall	Back / Return

Originale	Sostituto
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Auto	Setup / OPT /
Menu	Menu / Home
Zoom	Zoom / Size
Info	Info / Angle
Exit	Exit / Cancel / Clear
Up	Up
CH+	CH+ / Page+
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
CH-	CH- / Page-



