





 













 































 
 
 



 
 


 
 












Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 ...	 Fav / Marker / PC
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol-	 Vol-

Originale	Sostituto
 CH-	 CH- / Page-
 Micro	 Display / Media
 Home	 Menu / Home
 Wire	 AV / Input / RDS
 Wheel Up	 Up
 OK	 OK
 Wheel Down	 Down
 Back	 Back / Return
 Setting	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Netflix	 Shift + Red / Netflix /
 Prime Video	 Shift + Blue / Prime /
 Disney+	 Shift + Green / APP /
 Rakuten TV	 Shift + Yellow / YouTube / Repeat





	Originale	Sostituto		Originale	Sostituto
	 Smart	 Smart / List			
	 Alexa	 Shift + Smart / List			

