







Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Power Tv		Shift + Power		9		9
	Vol+ Tv		Vol+		FPlay		Shift + Green / APP /
	CH+ Tv		Shift + CH+ /		Last View		Fav / Marker / PC
	Drive Select		Smart / List		0		0
	Input AV Tv		Shift + AV / Input / RDS		NET		Display / Media
	Vol- Tv		Vol-		Netflix		Shift + Red / Netflix /
	CH- Tv		Shift + CH- /		I<< Skip		I<< / Preset-
	1		1		Skip >>I		>>I / Preset+
	2		2	<< Slow/Search button"/>	<< Slow/Search		<< / Tune-
	3		3		Slow/Search >>		>> / Tune+
	Page/CH+		CH+ / Page+		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		i/Status		Info / Angle
	Page/CH-		CH- / Page-		Exit		Exit / Cancel / Clear
	7		7		Guide		Guide / EPG / -/-





Originale	Sostituto
 Video Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Up	 Up
 Right	 Right
 Function Menu	 Menu / Home
 Down	 Down
 Back/Return	 Back / Return
 Option	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Text	 Text / Goto
 STTL	 Subtitle / EQ

Originale	Sostituto
 Prog/Check	 Shift + TV/Radio / Program
 Chapter	 Picture / Format
 Delete	 AV / Input / RDS
 Radio/TV	 TV/Radio /
 AD	 Audio / Lang I/II
 Time Slip	 Sleep / Timer
 -10s Manual Skip	 Shift + Left
 +60s Manual Skip	 Shift + Right

